



DHO2

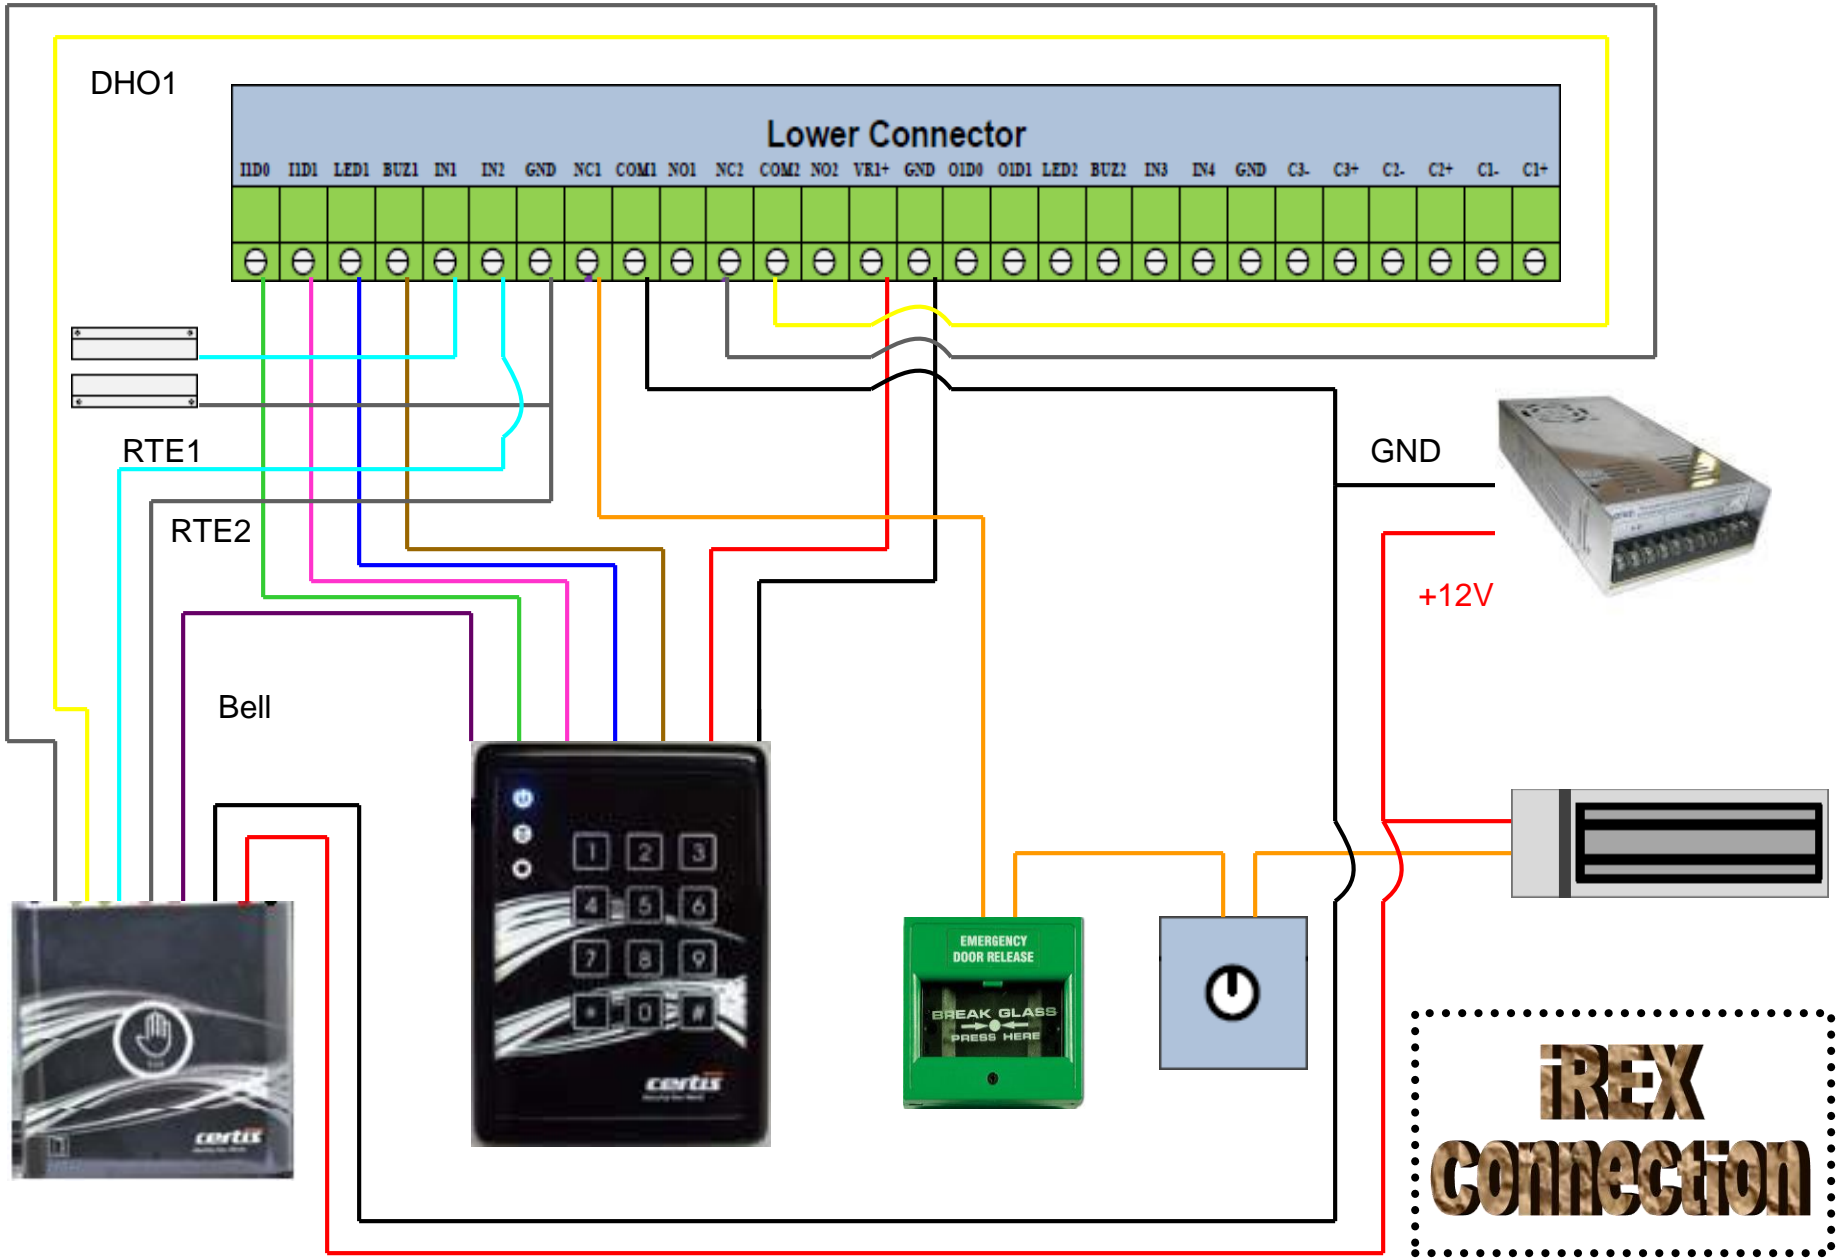

iREX
Connection

iREX Jumper Function Instruction

Terminal Connection Diagram

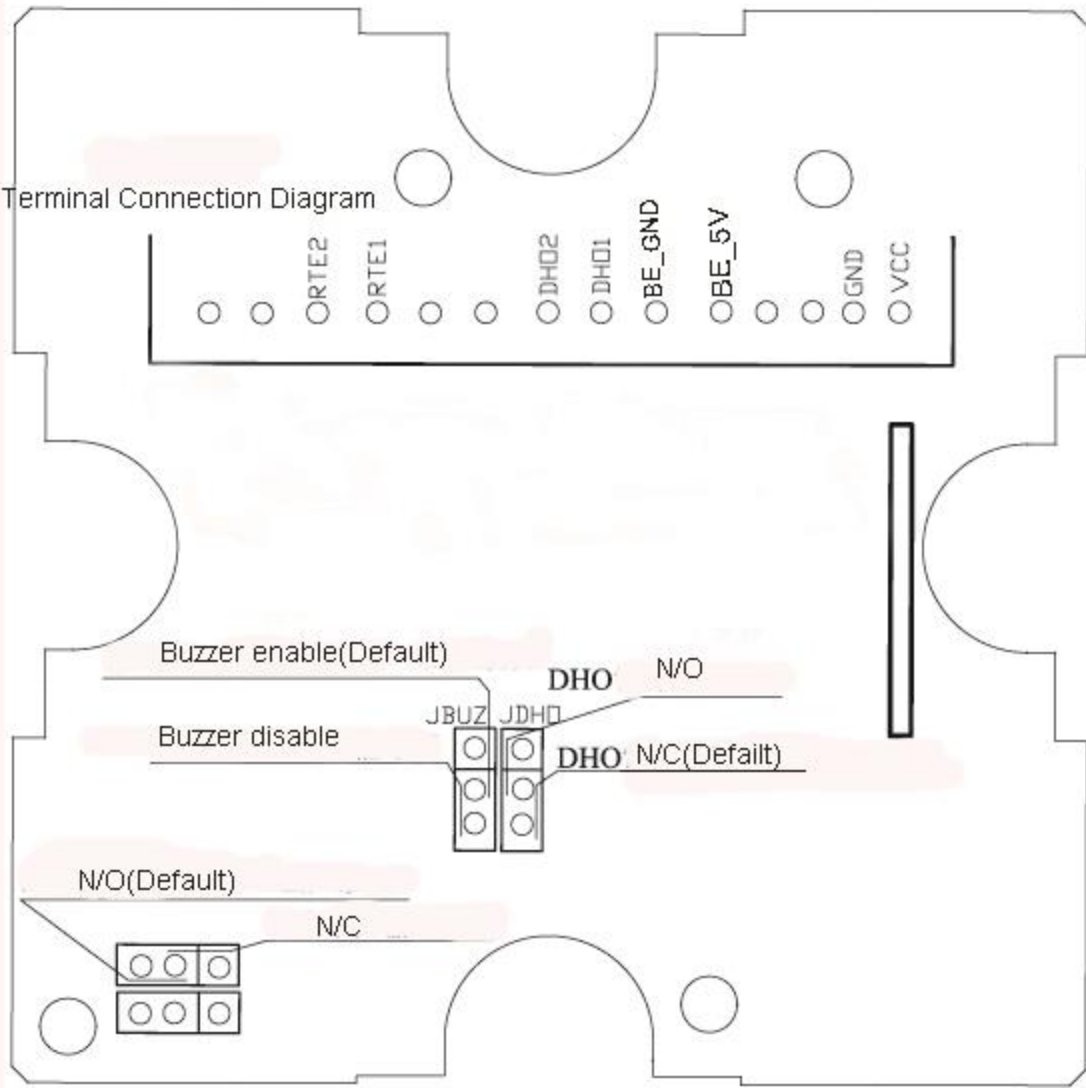

- VCC----+12V Power
- GND----Ground
- RTE1----Request to Exit output 1
- RTE2----Request to Exit output 2
- DHO1----Door Held Open input 1
- DHO2----Door Held Open input 2
- BE_5V---Doorbell high level input 5V
- BE-GND---Doorbell input GND